


# Focus Control with MONETTE VIEWING SCOPE and BRACKET

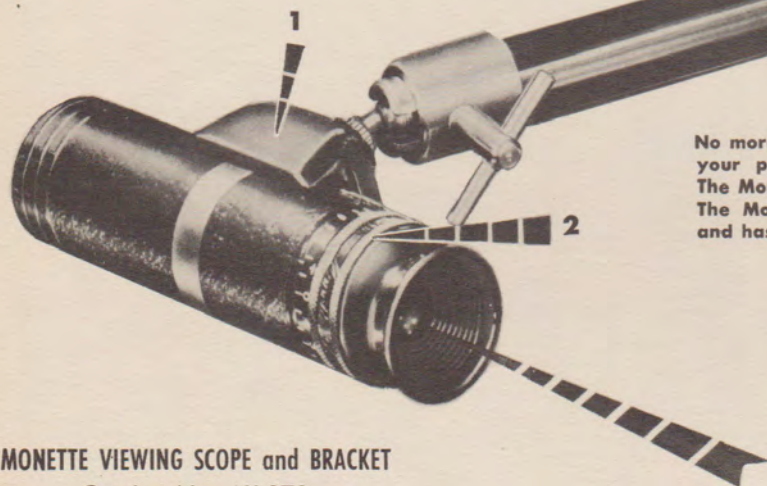

No more guessing "Is it in focus"? Look through your VIEWSCOPE while focusing your projector — you'll know exactly what you're getting "on-the-screen." The Monette Viewing Scope is a precision optical instrument; an 8x prism scope. The Monette Viewing Scope is compact, offers convenient one hand focusing and has a wide field. Coated optics throughout.

## MONETTE VIEWING SCOPE and BRACKET

Catalog No. AX 270

LIST PRICE

**\$62<sup>00</sup>**

F.O.B. PLANT

**DISCOUNT 40% OFF LIST PRICE**

## INSTALLATION

1. Mount the MOUNTING BRACKET on the inside wall of the projection booth. Swivel clamp assembly should clear edge of observation port by 3".
2. Lock both adjusting wing nuts.
3. Loosen monel clamp band by turning (1) counter-clockwise.
4. Insert MONETTE VIEWING SCOPE and tighten monel band by turning (1) clockwise.

## ADJUSTMENT

1. If you wear glasses remove eye cap from VIEW SCOPE.
2. Train Scope on blank screen.
3. Looking through the View Scope slowly turn (2) until screen is in focus. Check and make note of plus or minus reading on the diopter scale. When you use the View Scope, always set the diopter scale to this reading. This reading will probably vary for each operator so it is important that it be set to your diopter reading when you are using the Viewing Scope for focusing.

## USE

1. Set diopter scale to your correction reading (plus or minus).
2. Looking through the View Scope turn focusing knob on your Projector until the picture is in focus. Be sure that the View Scope is set to your diopter reading.

## CARE

The Monette Viewing Scope is a precision instrument and should be cared for as such. To assure proper performance the following cleaning procedure is offered as a help to users.

1. Remove all particles of dust or lint with a clean camel's hair brush, which should be used only for this purpose.
2. Wet sheet of clean "Lens Tissue" in any good liquid lens cleaner similar to the "Guild Craft" lens cleaner, grain alcohol or acetone, and wipe the surfaces gently but thoroughly.
3. Cloths of any character are not recommended for cleaning — use LENS TISSUE.
4. Dry the surface with a clean dry piece of "Lens Tissue."
5. Never attempt to open the Monette Viewing Scope since it is factory sealed. In event of damage return to factory for inspection.

